

SPECIFICATIONS

Model Number	: WGP13S
Number of Buttons	: 19
Connectivity	: StrikeSpeed Wireless, Wired
Thumbstick Type	: Hall-Effect
Trigger Type	: Hall-Effect
Face Button Type	: Membrane
Turbo	: Yes
Vibration	: 4-level Adjustable
Programmable Buttons	: 12
Polling Rate	: 1000 Hz
Battery Capacity	: 600 mAh Li-ion
Battery Life	: Up to 20 Hours
Size	: 156*104*60 mm
Weight	: 187 ± 1 g
Power Rating	: 3.7V⎓180 mA
Compatibility	: Windows 7 or later, Switch, Android, PS3



PRODUCT TOUR

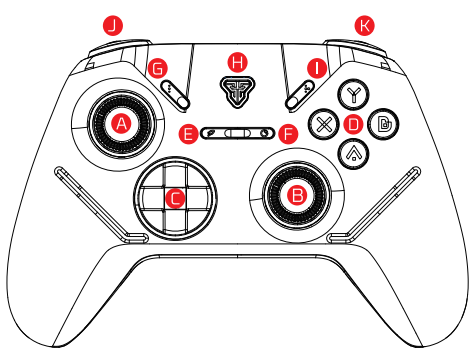

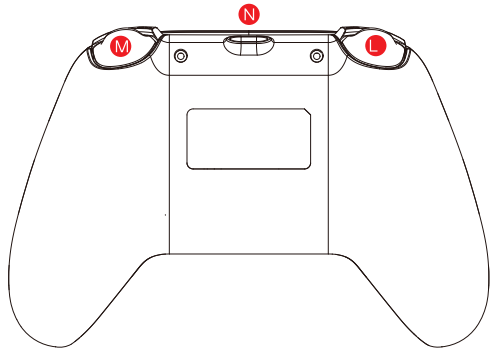

EN

- A Left Thumbstick
- B Right Thumbstick
- C Directional Pad
- D Action Buttons
- E Turbo Button
- F Snap Button
- G Select Button
- H Home Button
- I Start Button
- J Left Bumper
- K Right Bumper
- L Left Trigger
- M Right Trigger
- N USB C Port

ID

- A Thumbstick kiri
- B Thumbstick Kanan
- C Pad Pengarah
- D Tombol Aksi
- E Tombol Turbo
- F Tombol Snap
- G Tombol Select
- H Tombol Beranda
- I Tombol Start
- J Bumper Kiri
- K Bumper Kanan
- L Pemicu Kiri
- M Pemicu Kanan
- N USB C Port

ZH

- A 左摇杆
- B 右摇杆
- C 方向键
- D 操作按钮
- E 连发按钮
- F 分享按钮
- G 选择按钮
- H 主页按钮
- I 开始按钮
- J LB 按钮
- K RB 按钮
- L LT 按钮
- M RT 按钮
- N USB C 接口

ES


- A Palanca izquierdo
- B Palanca derecho
- C Pad direccional
- D Botones de acción
- E Botón turbo
- F Botón de compartir
- G Botón de selección
- H Botón de Inicio
- I Botón de Inicio
- J Gatillo Izquierdo
- K Gatillo Derecho
- L Gatillo LT
- M Gatillo RT
- N Puerto USB tipo C

JP

- A 左ジョイスティック
- B 右ジョイスティック
- C 方向パッド
- D アクションボタン
- E ターボボタン
- F 共有ボタン
- G 選択ボタン
- H ホームボタン
- I スタートボタン
- J 左バンパー
- K 右バンパー
- L 左トリガー
- M 右トリガー
- N USB-Cポート

KR

- A 왼쪽 조이스틱
- B 오른쪽 조이스틱
- C 방향 패드
- D 액션 버튼
- E 터보 버튼
- F 공유 버튼
- G 선택 버튼
- H 홈 버튼
- I 시작 버튼
- J 왼쪽 버튼
- K 오른쪽 버튼
- L 왼쪽 트리거
- M 오른쪽 트리거
- N USB C 포트

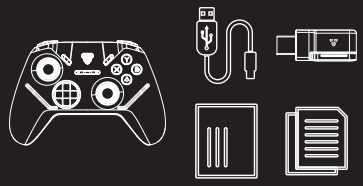

ANY QUESTIONS?

Thanks for choosing Fantech.
If you have any question or need any help with your products, please do not hesitate to contact us.

support@fantechworld.com

WGP13S
SHOOTER III
MULTI-PLATFORM GAMEPAD

QUICK START GUIDE

PANDUAN CEPAT [ID]
快速入门指南 [ZH]




DOWNLOAD

To further customize your setting, please visit our website and download the software (if applicable).


www.fantechworld.com

HOW TO CONNECT

WIRED CONNECTION

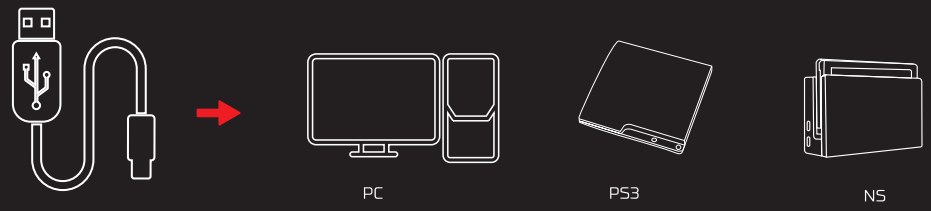

2.4GHZ CONNECTION

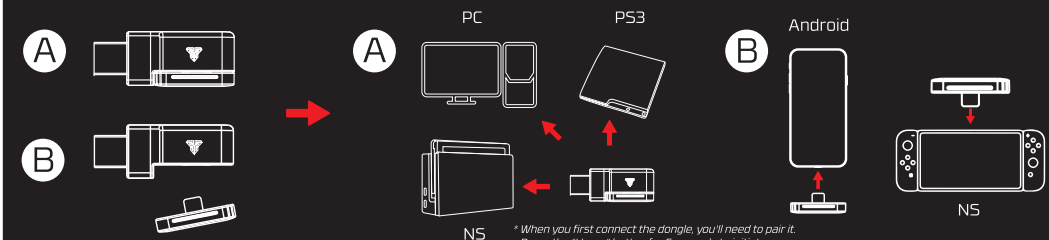

*When you first connect the dongle, you'll need to pair it. Press the "Home" button for 5 seconds to initiate the pairing process.

LED INDICATOR



X-Input (PC, Android)


D-Input (PC, Android, Emu)

S-Input (Emu, PS3, NS)

*On PC, to toggle from X-Input to D-Input, press the home button for 3 seconds.

*On Android, LED will only show D-Input notification as small picture above. Switch from D-Input to X-Input by pressing the home & snap buttons simultaneously for 3 seconds.

FACTORY RESET

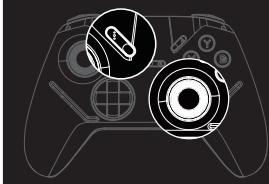

1. Press and hold the select button and R3 simultaneously.
2. Hold them for 10 seconds until the gamepad vibrates and all the indicator lights illuminate to activate.

*After successfully resetting the gamepad, it will enter a locked state requiring you to plug in a wire to unlock it.

TURBO MODE



1. To use the turbo effect, hold the Turbo button & press the action button you want to assign.
2. To clear the turbo effect, hold the Turbo button & press the button that you've already assigned.

*The turbo function can be applied to these buttons:
Action buttons, LT, RT, RB, LB.

MACRO MODE



1. Press & hold the turbo button until the gamepad vibrates to activate.
2. Begin recording your macro, allowing up to 63 button inputs within a 5-minute window.
3. Press the turbo button again to stop recording & to execute the macro, press the turbo button twice.
4. To clear the macro, press & hold the turbo button until the gamepad vibrates, then press again the turbo button.

*The macro function can be applied to : these buttons:
Action buttons, LT, RT, RB, LB, directional pad.