SPECIFICATIONS

Model Number	: WGP18
Number of Buttons	: 20
Connectivity	: StrikeSpeed Wireless, BT5.2, Wired
Thumbstick Type	: Hall-Effect
Trigger Type	: Hall-Effect
Trigger Button Type	: Mechanical
Action Button Type	: Mechanical
D-Pad Button Type	: Mechanical
Bumper Button Type	: Mechanical
Rear Button Type	: Mechanical
Polling Rate	: 1000 Hz (Wired), 1000 Hz (Wireless)
Macro Buttons	: 14 (Rear Paddles and System Buttons excluded)
Turbo	: Yes
Battery Life	: Up to 8 Hours
Size	: 158.5*103*63.9mm
Weight	: 240 ± 3 g
Power Rating	: 5V ⎓ 390 mA
Compatibility	: PC/Switch, Switch 2, iOS, MacOS, tvOS, Android

Join the Fantech Discord Community



FANTECHWORLD
SUPPORT@FANTECHWORLD.COM
FANTECH_WORLD
FANTECH WORLD
FANTECH WORLD
FANTECHWORLDOFFICIAL

PRODUCT TOUR

EN

- A Left Thumbstick (L3)
- B Right Thumbstick (R3)
- C Directional Pad
- D Action Buttons
- E Share Button
- F Home Button
- G Option Button
- H M Button (Multi-Function Button)
- I LED Indicator
- J Left Bumper
- K Right Bumper
- L Right Trigger
- M Left Trigger
- N USB-C Port
- O Trigger Lock
- P Mode Switch
- Q Right Rear Paddle (M2)
- R Left Rear Paddle (M1)
- S Dongle Slot
- T USB-C Port (Charging Dock)
- U Pairing Indicator
- V Pairing Button

ID

- A Thumbstick Kiri
- B Thumbstick Kanan
- C Tombol Arah (D-Pad)
- D Tombol Aksi
- E Tombol Share
- F Tombol Home
- G Tombol Option
- H Tombol M (Tombol Multi-Fungsi)
- I Indikator LED
- J Bumper Kiri
- K Bumper Kanan
- L Trigger Kanan
- M Trigger Kiri
- N Port USB-C
- O Kunci Pemicu
- P Sakelar Mode
- Q Paddle Belakang Kanan (M2)
- R Paddle Belakang Kiri (M1)
- S Slot Dongle
- T Port USB-C (Charging Dock)
- U Indikator Pairing
- V Tombol Pairing

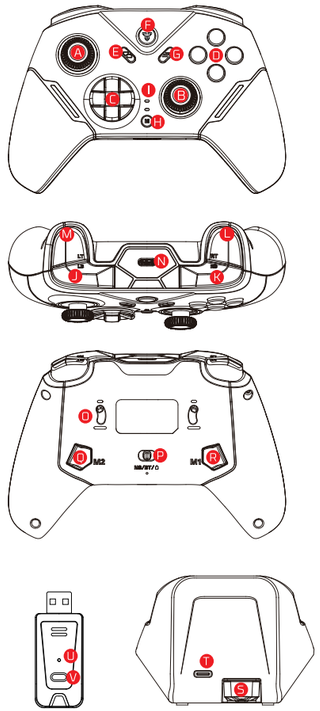

RUMBLE FUNCTION



1. Press and hold the M button + L3 Up or Down.
2. The Controller will rumble and the rumble intensity will indicate the current rumble level.

**There are 4 level rumble (100%-70%-35%-0%).*

INPUT MODE SWITCH



Default Mode: X-Input (LED 2 Solid Red)
1. Press and hold SHARE + OPTION together.
2. The gamepad will vibrate to confirm the switch:
   - First switch → D-Input (LED 1 Solid Blue+LED 2 Solid Red)
   - Second switch → Switch Input(LED 1 Solid Blue)
3. Repeat the same action to cycle through the available input modes.

**Mode Switching is only available in 2.4GHz and Wired Mode.*

TURBO & AUTO TURBO MODE



1. Activate Turbo Effect: Hold the M button and press the action button you want to assign.
2. Enable Auto-Fire: Hold the M button and press the action button that's already assigned.
3. Remove Turbo Effect: Hold the M button and press the assigned action button again.
4. Adjust Turbo Speed: Hold M and move R3 up or down to cycle through the speed levels.

**The turbo function can be applied to these buttons: Action Buttons, LT, RT, RB, LB. Turbo speed has 3 levels: 100%, 50% (default), 25%.*

CALIBRATION



1. Ensure the gamepad is turned off.
2. Hold L3 + HOME + RB (Right Bumper) until the indicator light starts blinking.
3. Press A to start calibration.
4. Gently rotate the thumbstick in a full circle.
5. Slowly press the trigger while keeping the circular motion.
6. When calibration is complete, press A again to confirm. The indicator light will turn solid green to indicate success.

MACRO FUNCTION



Assigning a Macro

1. Press and hold M button+Rear Paddle (Left/Right) for 2 seconds.
2. When the LED indicator blinks, press the button you want to assign.
3. Press the Rear Paddle (Left or Right) to confirm and save the macro.

Deleting a Macro

1. Repeat the process then press the Rear Paddle (Left or Right) without assigning any button.
2. The macro will be cleared.

**You can record up to 16 buttons. The macro will stop automatically after 5 minutes of inactivity.*

FACTORY RESET



1. Press and hold L3 + R3 + M at the same time.
2. The controller light will flashes and shut off to confirm a successful reset.



ANY QUESTIONS?

Thanks for choosing Fantech.
If you have any question or need any help with your products, please do not hesitate to contact us.

support@fantechworld.com

WGP18
ZENITH PRO
WIRELESS MULTI-PLATFORM GAMEPAD

QUICK START GUIDE

PANDUAN CEPAT [ID]
快速入门指南 [ZH]



DOWNLOAD

To further customize your setting, please visit our website and download the software (if applicable).

www.fantechworld.com

HOW TO CONNECT

WIRED CONNECTION (PC, SWITCH, SWITCH 2)

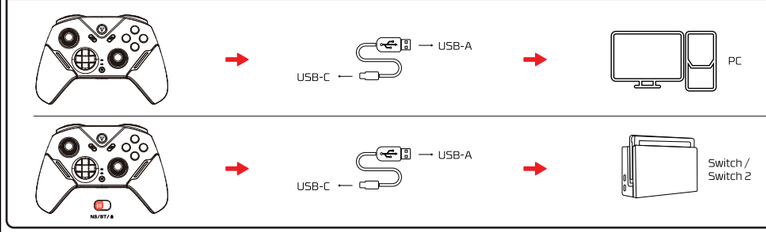

BT CONNECTION (PC & SWITCH / SWITCH 2 & SMARTPHONE)



STRIKESPEED CONNECTION (PC & SWITCH / SWITCH 2 & SMARTPHONE)

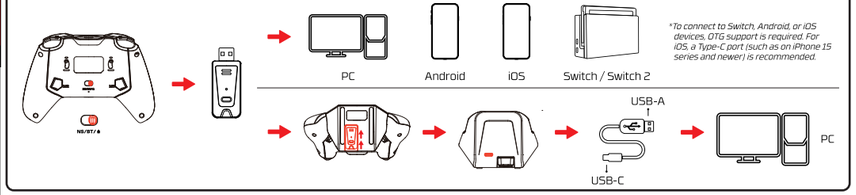

**To connect to Switch, Android, or iOS devices, OTG support is required. For iOS, a Type-C port (such as on iPhone 15 series and newer) is recommended.*

LED INDICATOR

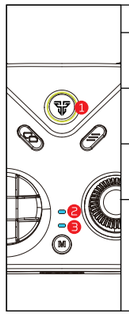

MODE / CATEGORY	DESCRIPTION	LED 1	LED 2	LED 3	REMARKS
SWITCH (BT & Wired)	Successfully Connected:	○	⊘	■	LED 1 light Solid White, LED 3 light Solid Blue
	Pairing:	◎	◎	⊘	LED 1 & LED 2 blinks White rapidly
ANDROID / IOS (BT)	Successfully Connected:	■	⊘	⊘	LED 1 light Solid Yellow, LED 2 light Solid Blue
	Pairing:	◎	◎	⊘	LED 1 blinks Yellow rapidly, LED 2 blinks Blue rapidly
PC (BT & Wired) - (X-Input)	Successfully Connected:	■	⊘	■	LED 1 light Solid Green , LED 3 light Solid Red
	Pairing:	◎	⊘	◎	LED 1 blinks Green rapidly, LED 3 blinks Red rapidly
ADDITIONAL STATUS	Low Battery:	◎	⊘	⊘	LED 1 blinks Red rapidly
	Full Charged:	⊘	⊘	⊘	LED OFF
	D-Input Mode:	■	■	⊘	LED 1 light Solid Green, LED 2 Solid Blue, LED 3 Solid Red
	Switch Input Mode:	■	■	⊘	LED 1 light Solid Green, LED 2 Solid Blue