



Installation instructions



Ax1



Bx1




Cx1




Dx1



Ex1



Fx1



Gx2



Hx2



Ix3 (1104mm)



Jx2 (1104mm)




Kx8 (570mm)




Lx6 (433mm)



Mx4 (350mm)

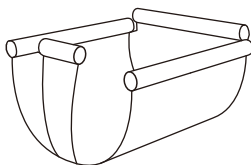


Xx1

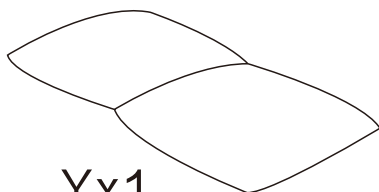

Yx1




Nx1



Ox1




Px1

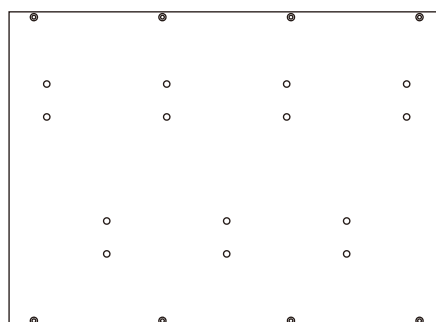


Qx1




Rx7

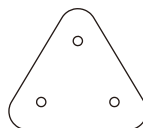

Sx2

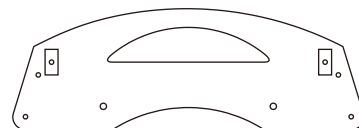


Tx2

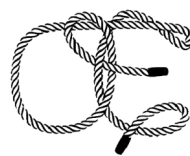


U1-0.9m*2
U2-1.05m*1
U3-1.3m*2
U4-1.7m*3
U5-4m*1

Ux9



Vx1



Wx2




①x12



②x16




③x2



④x44





⑤x14





⑦x1


Step 1

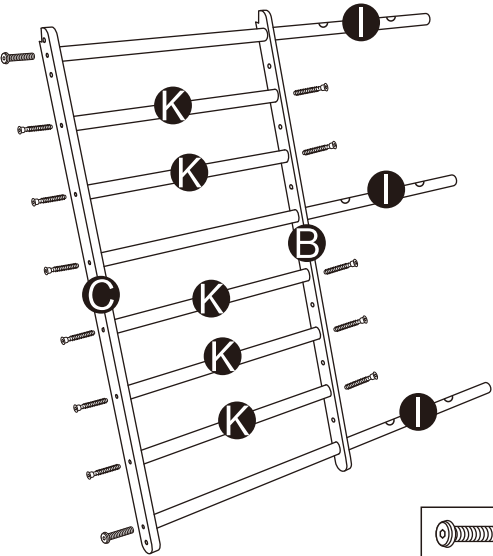

Step 2


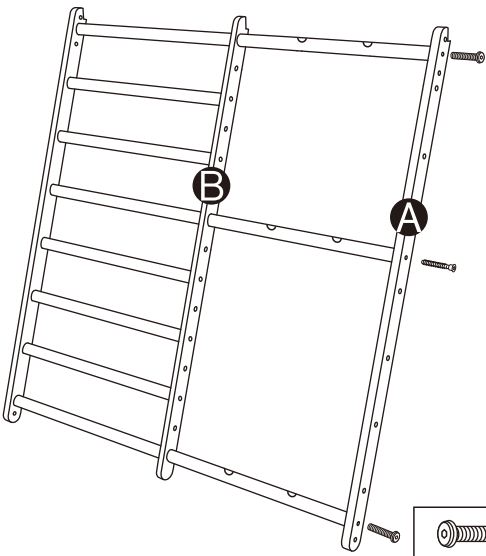


Step 3

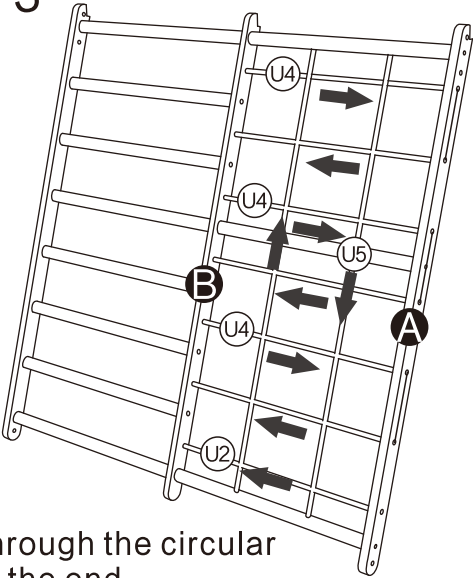


Knot through the circular hole at the end.


Step 4

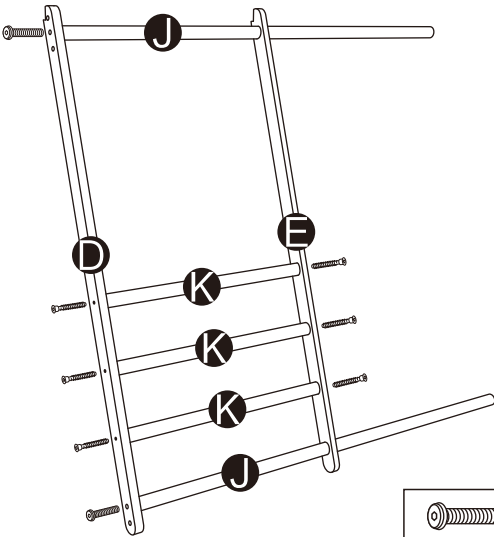


Step 5

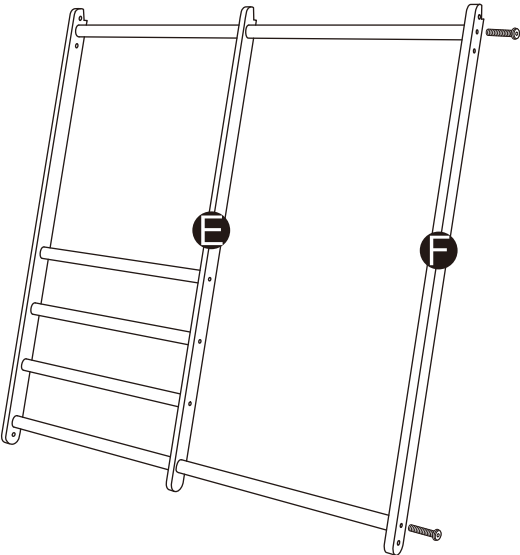

Step 6

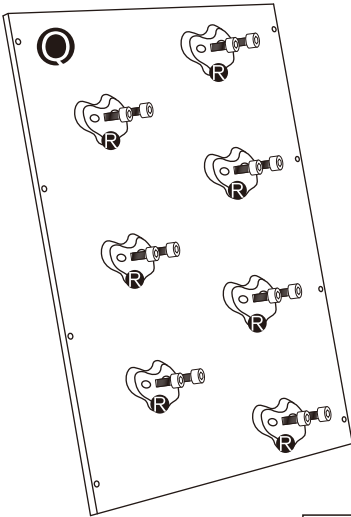


Step 7

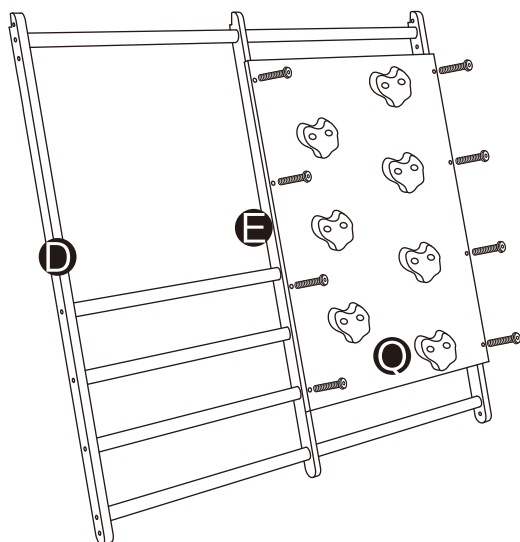


 2x8

Step 8

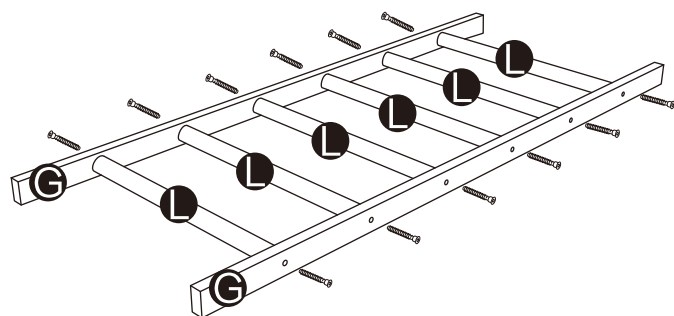


 4x12


Step 9

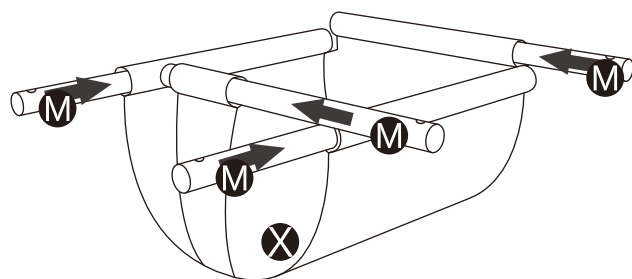

Step 10

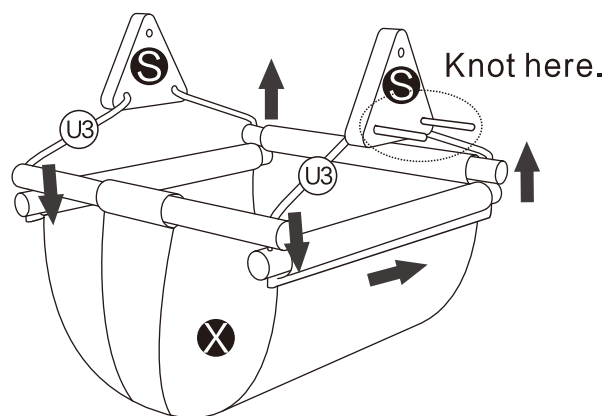


Step 11

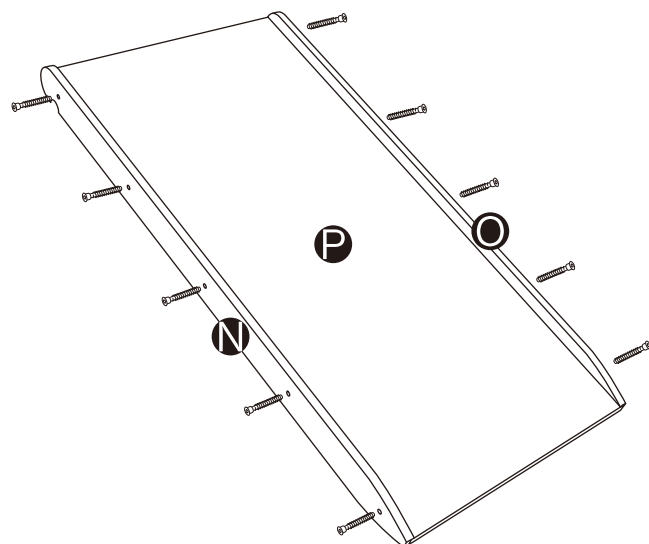


 4x10

Step 12

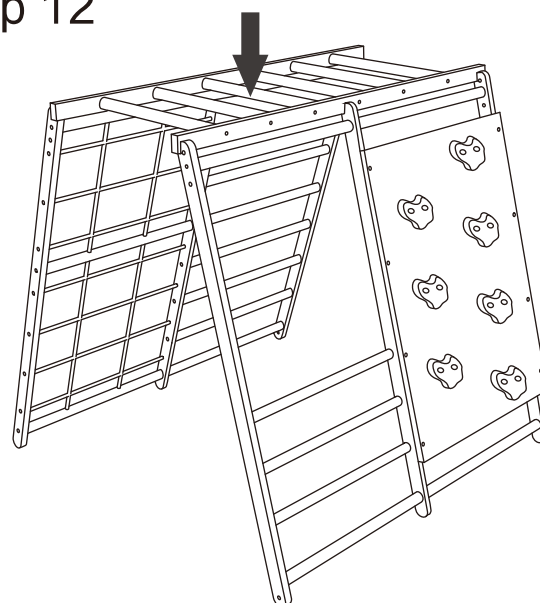


Step 13

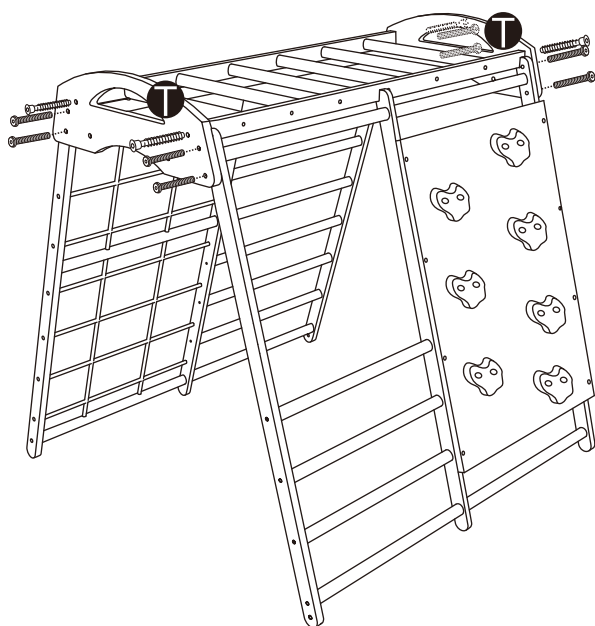

 ① x8


 ④ x4

Step 14

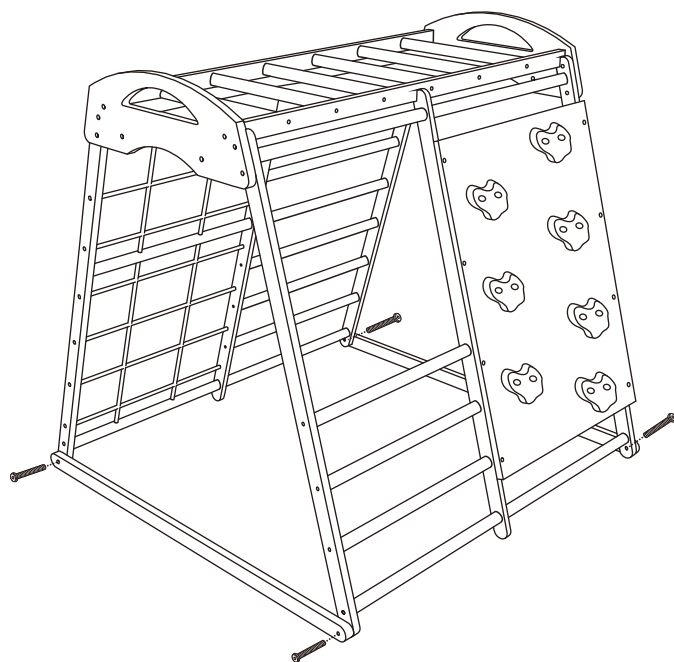

 ① x4

Step 15

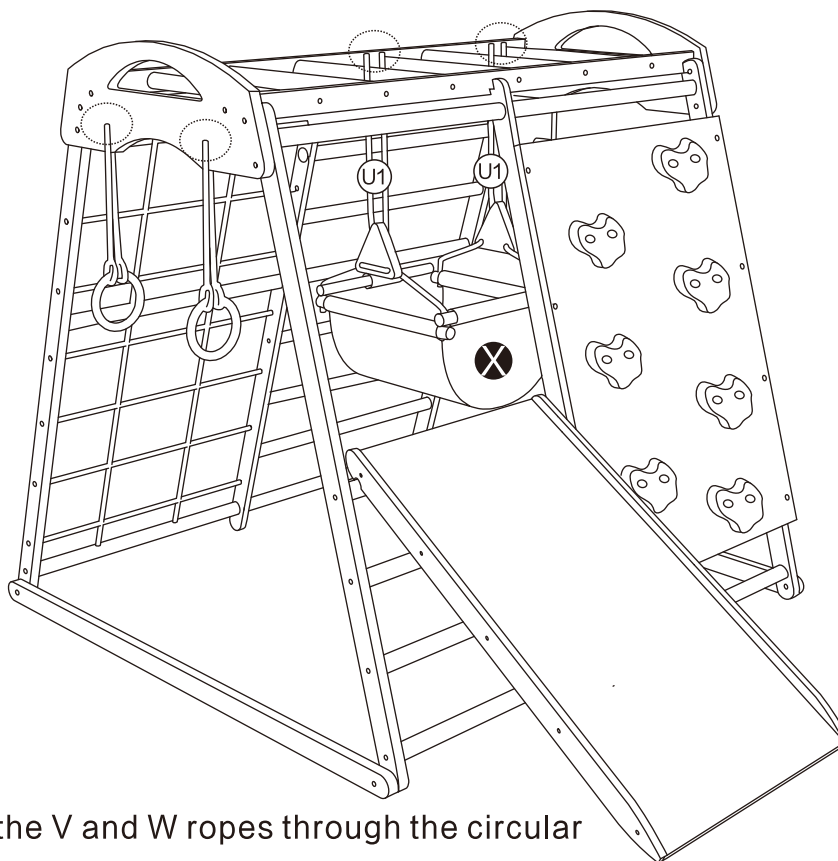

1. Tie one end of the V and W ropes through the circular hole of T.
2. Thread U through the circular hole at the upper end of S and tie a knot above the wooden stick.
3. Put Y into X.