

BT55 - 1986

Read before assembly

* Read carefully and fully understand the instructions before assembly. * Use polyester putty, for remodelling and repair of resin body and parts.


* Keep away from small children.


* Cement and paints not included in the kit.

* Model car for collectors. Not suitable for modellers under 14 years old.




* **Tools required:** cement, plastic scribe, side cutter, tweezers and modelling knife.

* Use diano-acrilate cement only.

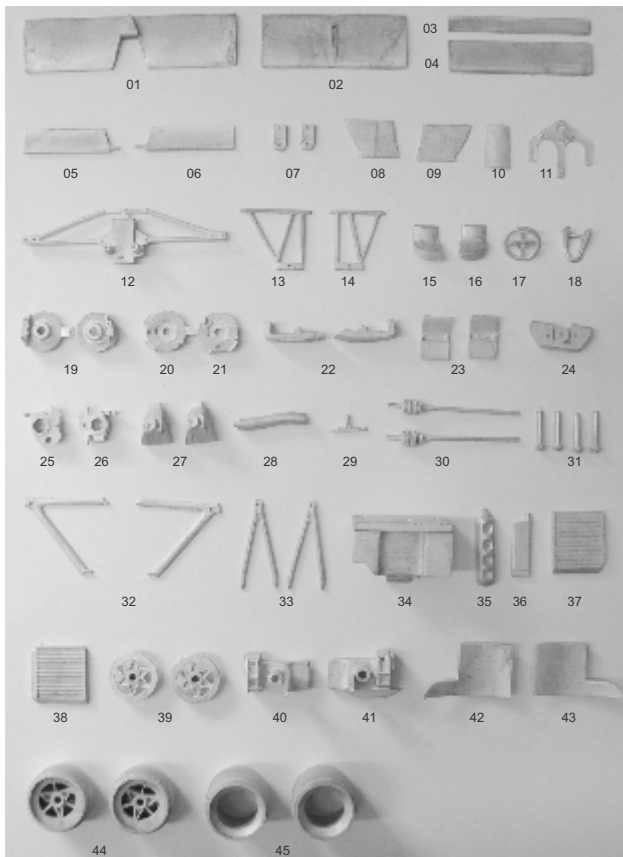

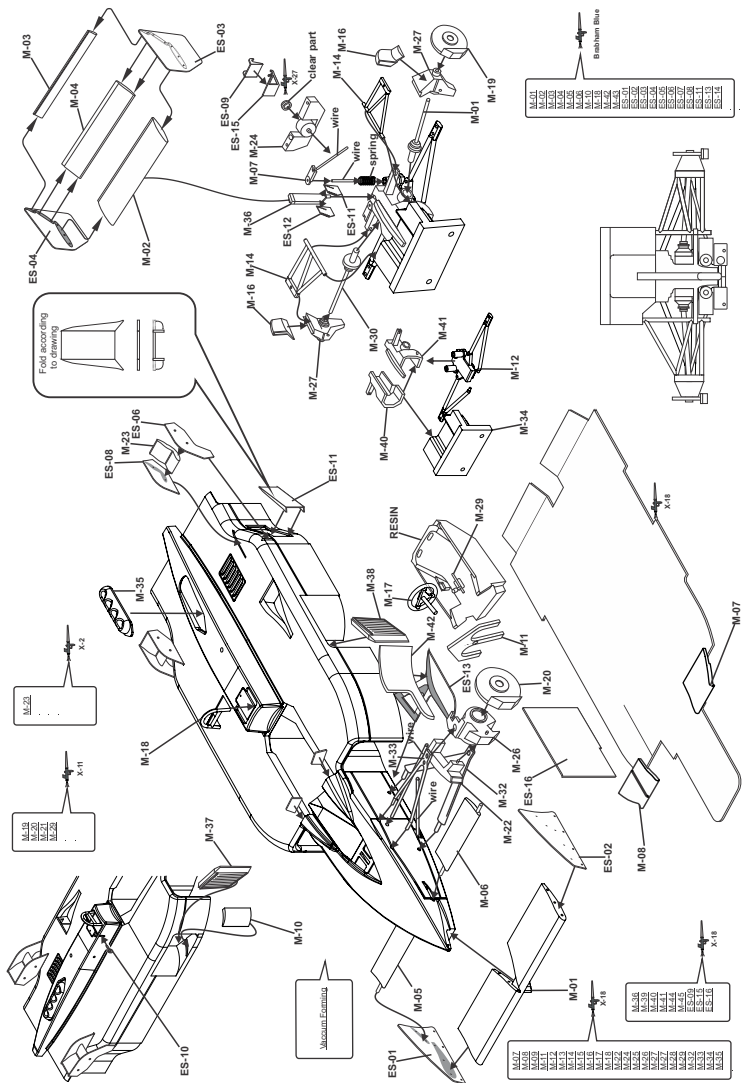

Decal placement

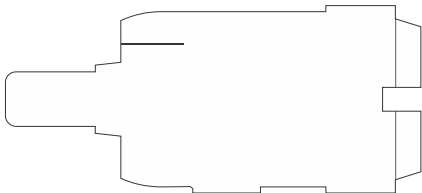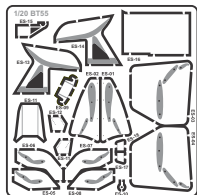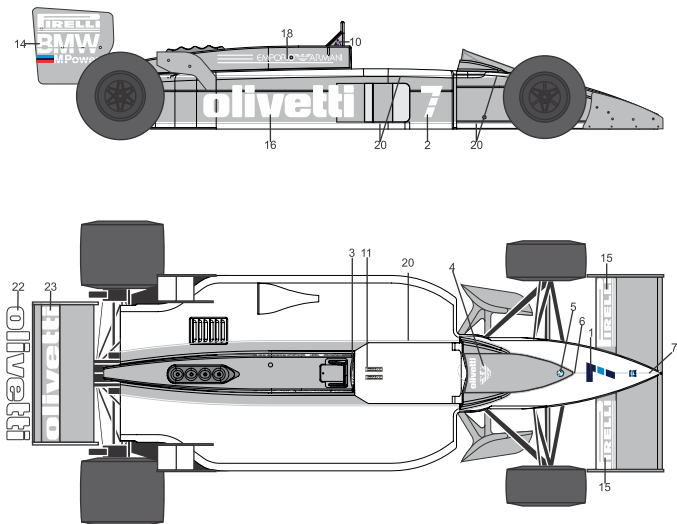

Vacuum forming x1
Tyres rubber x 4
Clear part resin x 2

Resin parts x 2
MINI SCREW steel x8
SCREW steel x 2

Spring parts x 2
Wire brass x2

